


TRACER WIRE INSTALLTION AT MANHOLE

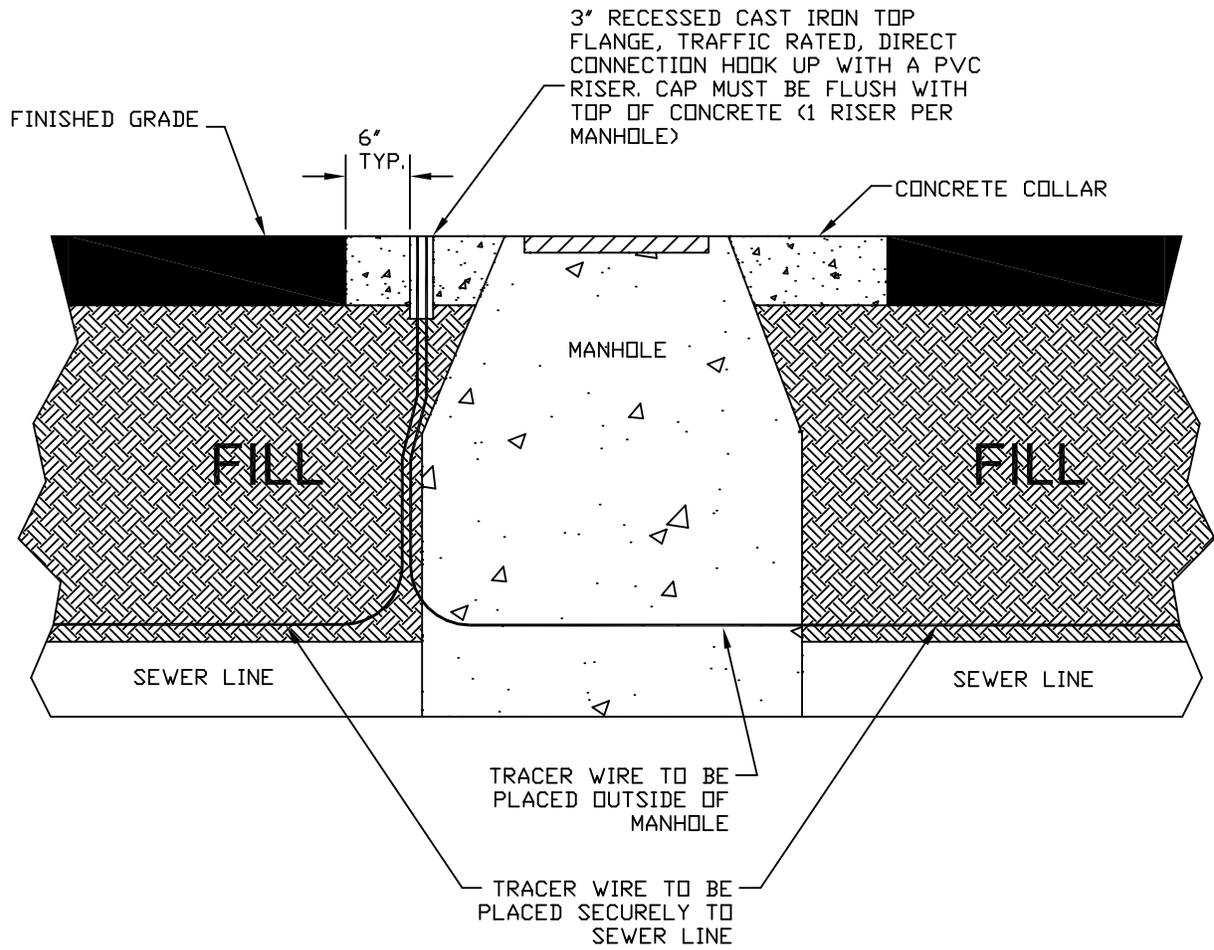

NOTES:

1. USING A #12 INSULATED SOLID WIRE, ANCHOR WIRE TO STATIONARY OBJECT (I.E.) VALVE BOLT.
2. LAY WIRE ALONG PIPE AS CLOSE AS POSSIBLE TO PIPE.
3. AT INTERVALS ANCHOR WIRE TO VALVES, PIPE JOINTS OR SERVICE LATERALS.

- * WHEN NECESSARY TO SPLICE WIRE USE ONLY WIRE SPECIFIC FOR #12 GAUGE WIRE.
- * INSULATE SPLICE WITH RAKIUM TAPE AND REINFORCE WITH COMMON ELECTRICAL TAPE.

NOT TO SCALE

City of Rio Rancho-Public Infrastructure Department

APPROVED BY:

TITLE:

TRACER WIRE INSTALLATION AT MANHOLE

DATE:

PUBLIC INFRASTRUCTURE DEPARTMENT ENGINEERING DIVISION

DATE: 4/11

STANDARD DRAWING S-18

